

# Hisense

## HT002A

### UPGRADE GUIDE



#### WIRELESS SCREEN TRANSMISSION FOR HISENSE INTERACTIVE DISPLAYS

The wireless transmission dongle upgrade including FW upgrade and SW upgrade.  
FW upgrades can only be done on PC, and SW upgrades can only be done on your Interactive Display.

## FW Upgrade


Please install the driver on your PC for the dongle first. click the driver install exe to start installation.




Run the Android tool.

名称	修改日期	类型	大小
Androidtool	2019-08-05 16:04	文件夹	
dongle FW	2019-08-05 16:06	文件夹	
DriverAssitant_v4.4	2019-08-05 16:04	文件夹	
AndroidTool_Release_v2.31.zip	2019-08-01 20:25	WinRAR ZIP 压缩...	53
DriverAssitant_v4.4.rar	2019-08-01 20:24	WinRAR 压缩文件	9
DriverAssitant_v4.4.zip	2019-08-05 16:04	WinRAR ZIP 压缩...	9


bin	2017-09-08 0:35	文件夹	
Language	2017-09-08 0:35	文件夹	
Log	2019-12-30 11:44	文件夹	
AndroidTool.exe	2016-11-12 18:04	应用程序	1,020 KB
Android开发工具手册.pdf	2016-11-12 18:04	PDF 文件	1,556 KB
config.cfg	2016-11-12 18:04	文本文档	7 KB
config.ini	2016-11-12 18:04	配置设置	2 KB
config_2layer.cfg	2016-11-12 18:04	文本文档	7 KB

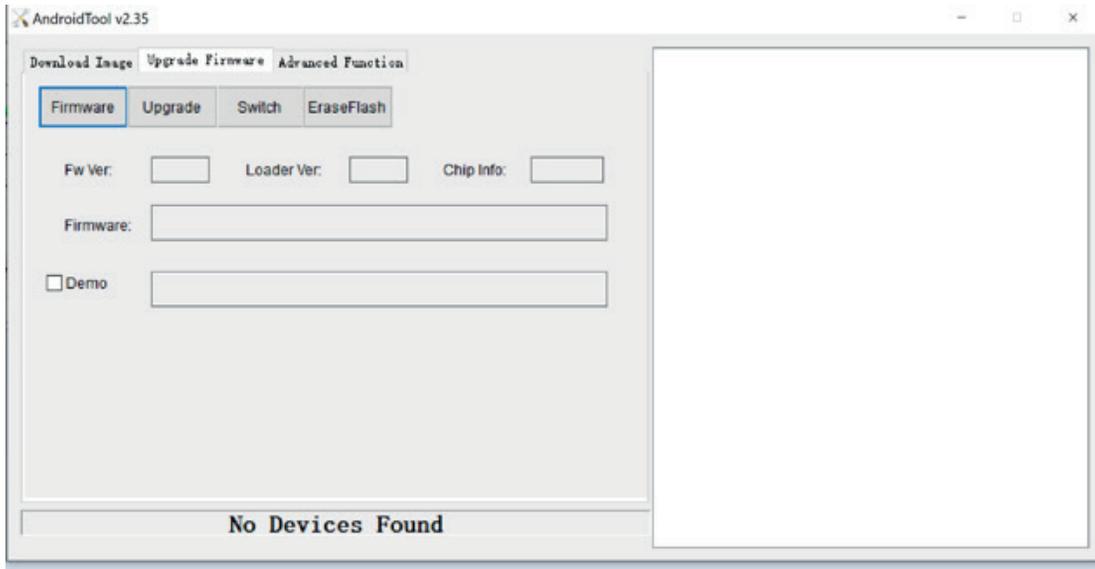

Press and hold the dongle button, inserting the dongle to the PC. The Android tool will prompt you with "Found one Loader Device".

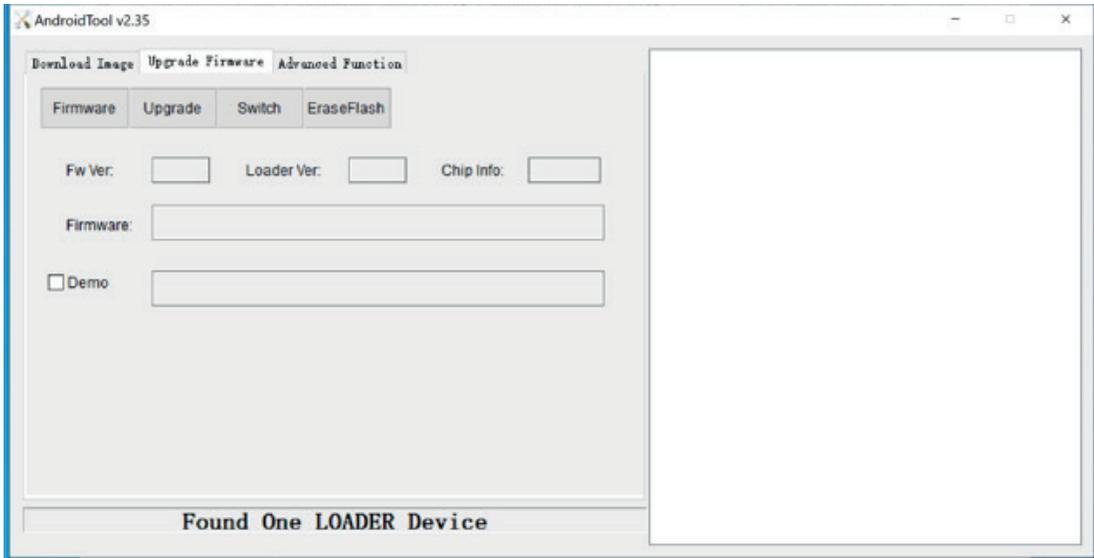

Click on the "Upgrade Fireware" tab and click "upgrade". Wait for the successful upgrade messege.

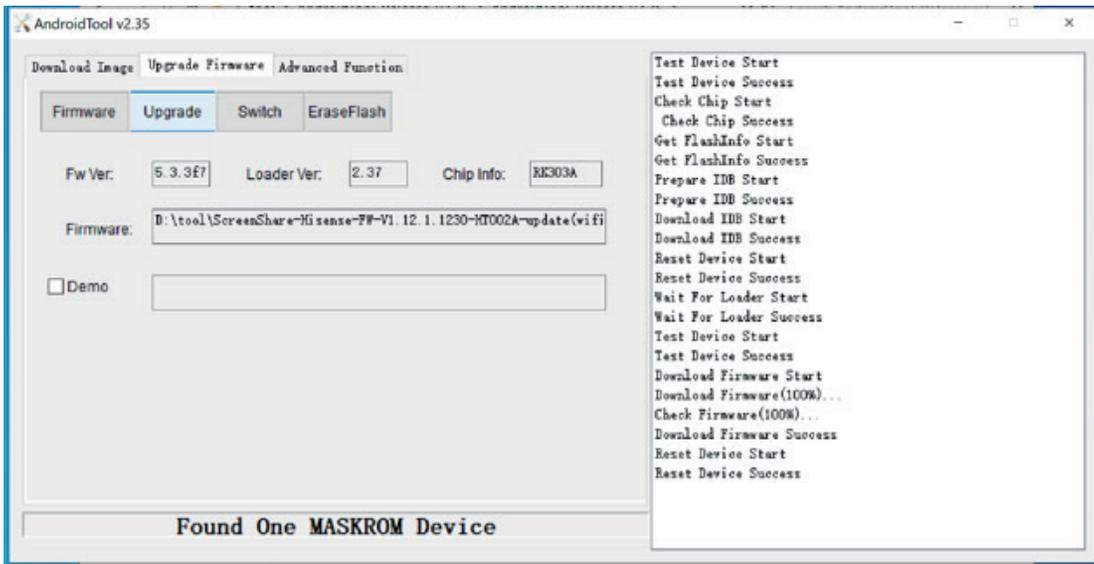

## SW Upgrade

Please ensure your interactive display is on the latest version.  
Insert the dongle to the interactive display ,and the dongle will automatically detect and install to the newest firmware.



Hisense Commercial Displays

Tel : +44 (0)115 8248811

Email: [sales@hisense-b2b.com](mailto:sales@hisense-b2b.com)

Web: [www.hisense-b2b.com](http://www.hisense-b2b.com)